
CROSSINGGARD® DOOR WITH THREATPROTECT™


Model ERD-TP

MEASURE THE WIDTH AND HEIGHT OF THE OPENING

SERVICE DOOR SIZE AND AREA

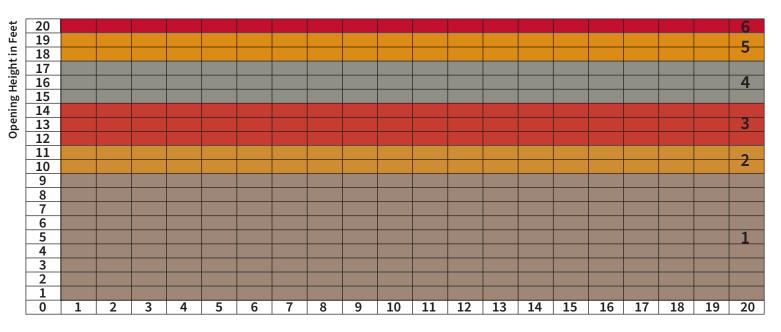

Opening Width in Feet

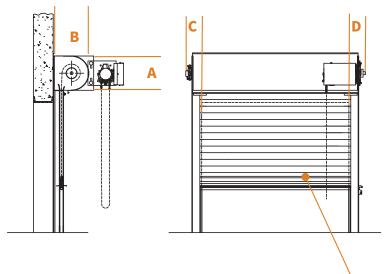


COMPONENT DIMENSIONS

Dimensions in Inches	6	19	21	10	7
	5	18	20	10	7
	4	17	19	10	7
	3	16	18	10	7
	2	15	17	10	7
	1	14	16	9	6
ō	Zone	Α	В	С	D

Reference the zone number to view component dimensions for motorized doors.

The dimensions featured on this sheet are provided as a guide. Please visit our website at www.cooksondoor.com/drawings to generate drawings on demand with exact dimensions.

CURTAIN SLAT DESIGN

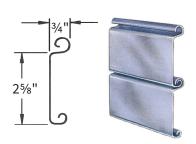


GUIDE CONSTRUCTION OPTIONS

FACE OF WALL


E GUIDE

Typically used with steel jamb

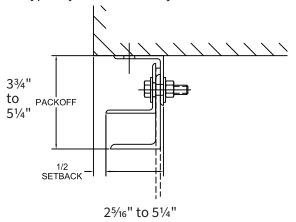

Z GUIDE


Typically used with masonry wall construction

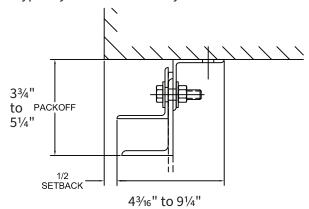

BETWEEN JAMBS


4 ANGLE

Most common for doors with chain/crank/motor operation

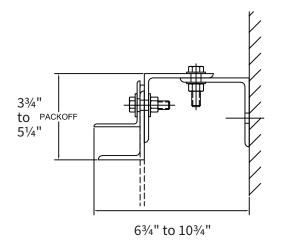

2 ANGLE - TUBES

Typically used if there's no wall support, or tubes and guides need to be recessed within the wall construction

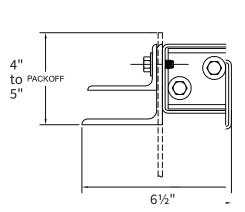

Remember, three main factors when choosing a guide assembly are:

- 1. Wall construction
- 2. Operation
- 3. Side clearance

The dimensions featured on this sheet are provided as a guide. Please visit our website at www.cooksondoor.com/drawings to generate drawings on demand with exact dimensions.

CUSTOM-DESIGNED SOLUTIONS

Our experienced Architectural Design Support Team can customize our products to fit your specific application. Call 800.233.8366 ext. 4551 • architecturaldesignsupport@cornellcookson.com

